


VESTA FIXTURE

**TOOLS NEEDED:
PHILLIPS SCREWDRIVER
RUBBER MALLOT
LEVEL**


ND + 0.5
BASE TABLE

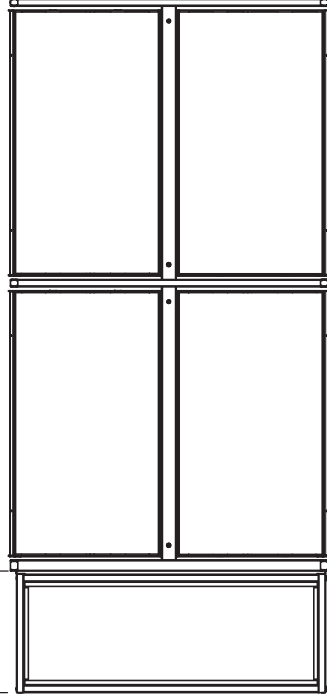

1.000
INT DIVIDER
PANEL

1.500
SLOTTED
END

NW + 1
NW

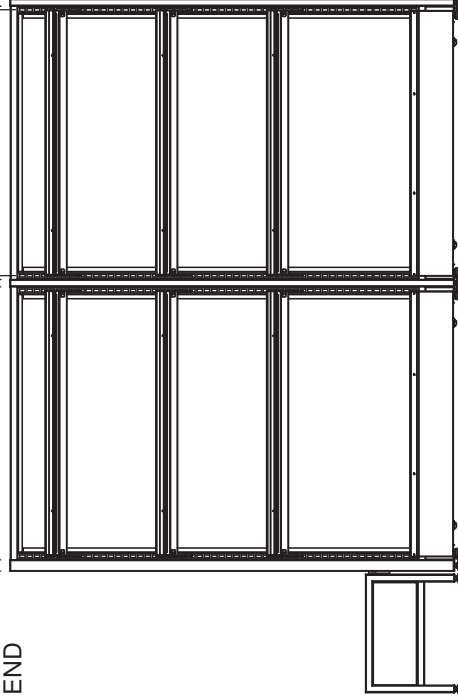

1.000
END DIVIDER
PANEL

NW + 1
NW

1.000
END DIVIDER
PANEL

UFDPUSEF
VESTA FIXTURE
DIVIDER PANEL UPRIGHT
SLOTTED END FRAME

UFDT
VESTA FIXTURE
BASE DISPLAY TABLE

ND + 0.5
BASE
DRAWER
NW + 1
2.000

UFGC
VESTA FIXTURE
GONDOLA CORE

UFDPU
VESTA FIXTURE
DIVIDER PANEL
UPRIGHT INTERMEDIATE

UFB
VESTA BASE DRAWER

UFDPU
VESTA FIXTURE
DIVIDER PANEL UPRIGHT END

REV.	DESCRIPTION	DATE
01	CHANGED NAME FROM ULTRA TO VESTA	2/21/2014

madix

ASY-80034772

© 2013 Madix Inc., All rights reserved
20984 AL HWY 9 GOODWATER, AL 35072
PO BOX 729 TERRELL, TX 75160
256-639-6354 / 214-515-5400 / 800-776-2349

SHEET 1 OF 8

REV. 01

ARB

2/21/14

ECM # 50000014190

20140221

© 2013 Madix Inc., All rights reserved




USE THIS NW DIVIDER PANEL FOR:

DOUBLE SIDED SLOTTED
GONDOLA END FRAME

DRAWER AND BASE TABLE MAY BE USED ON A GONDOLA RUN OR ON A SLOTTED END FRAME. THIS WILL HELP YOU TO DETERMINE WHICH SIZE PRODUCTS TO ORDER.

VESTA FIXTURE

© 2013 Madix Inc., All rights reserved

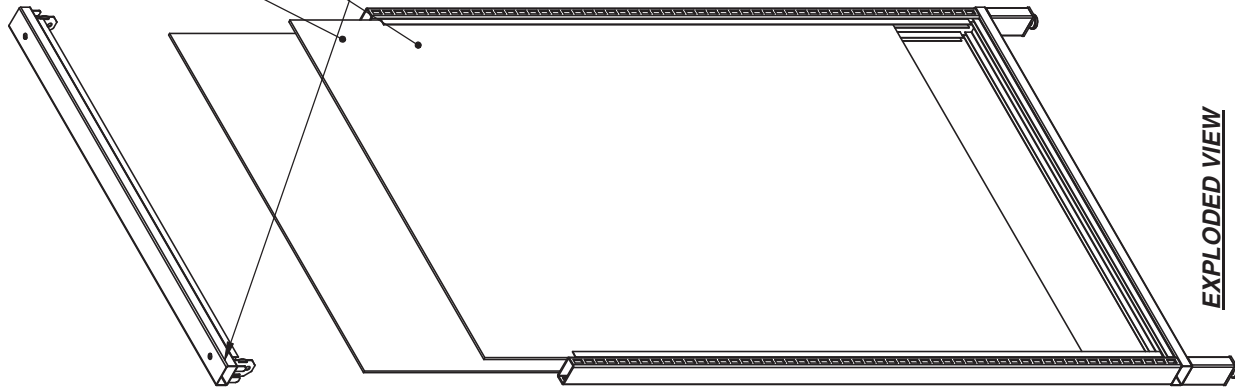


EXPLODED VIEW

STEP 1 : PEEL PROTECTIVE COVERING FROM ALL PLASTIC BACK PANELS BEFORE INSTALLATION.


STEP 2: INSERT (2) PANELS INTO TRACKS IN FRAME
HINT: DUE TO THE HIGH HEAT OF THE WELDING OPERATIONS, THE UPRIGHTS TEND TO DRAW INWARD, SO YOU MAY NEED TO HAVE SOMEONE HELP YOU SPREAD THE UPRIGHTS APART TO INSTALL BACK PANELS.

BE SURE PANELS SEAT ALL THE WAY IN THE BOTTOM OF BOTH TRACKS.

STEP 3: INSTALL TOP RETAINER
AFTER INSTALLING BACK PANELS, SEAT RETAINER INTO TOP OF UPRIGHTS. A RUBBER MALLOT MAY BE NEEDED. AGAIN, BE SURE THE BACK PANELS ARE ALIGNED WITH THE TRACKS IN THE TOP RETAINER, AND IT IS SEATED ALL THE WAY INTO THE UPRIGHT.

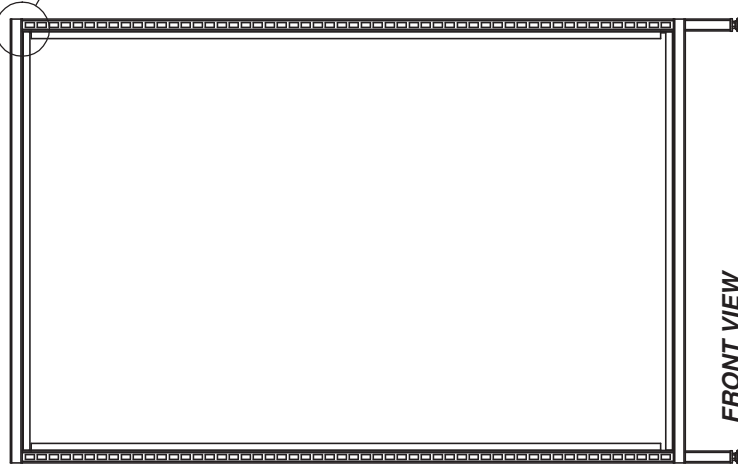

FRONT VIEW

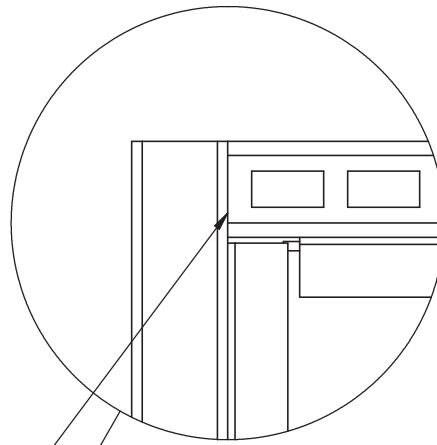

DETAIL A
SCALE 1 : 2



madix
ASY-80034772

P.O. BOX 729 TERRELL, TEXAS 75160
214-515-5400 / 800-762-5469


PAGE 3 OF 8 REV. 01
2/21/14 ARB ECM # 500000014190

20140221


VESTA FIXTURE

© 2013 Madix Inc., All rights reserved

INSERT THE CONNECTORS ON THE
END DIVIDER PANEL(CONNECTORS
WILL ONLY BE ON ONE SIDE ON AN
END DIVIDER) INTO OPEN END OF
TUBES ON THE SIDE OF THE
GONDOLA CORE WHILE PRESSING
SNAP BUTTON ON BOTTOM.
YOU MAY NEED TO USE A MALLOT
TO DRIVE THEM TOGETHER.
INSTALL SCREW INTO HOLE IN TOP
OF CORE RETAINER

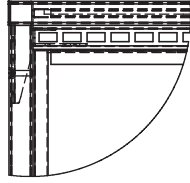

DETAIL B
SCALE 1 : 8

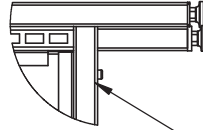

DETAIL C
SCALE 1 : 8

SNAP BUTTON ON BOTTOM



madix
ASY-80034772

P.O. BOX 729 TERRELL, TEXAS 75160
214-515-5400 / 800-7762349

PAGE 4 OF 8 REV. 01


2/21/14 ARB ECM # 500000014190

20140221

VESTA FIXTURE

© 2013 Madix Inc., All rights reserved

INSTALL INTERMEDIATE
DIVIDERS THE SAME AS
THE ENDS WERE INSTALLED.
INTERMEDIATE DIVIDERS
HAVE CONNECTORS ON BOTH
SIDES. INTERMEDIATE DIVIDERS
WILL BE USED UNTIL YOU ARE
AT THE END OF THE RUN, THEN
YOU WILL INSTALL ANOTHER END
OR A SLOTTED END FRAME.

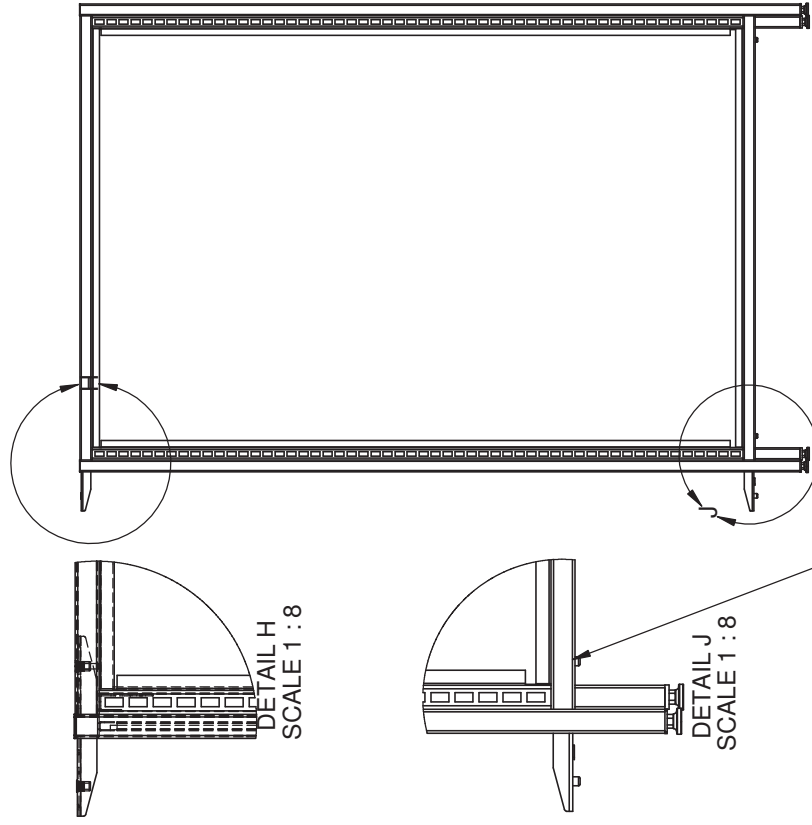

SNAP BUTTON ON BOTTOM



madix
ASY-80034772

P.O. BOX 729 TERRELL, TEXAS 75160
214-515-5400 / 800-776-2349


PAGE 5 OF 8 REV. 01

2/21/14 ARB ECM # 500000014190

20140221

VESTA FIXTURE

© 2013 Madix Inc., All rights reserved

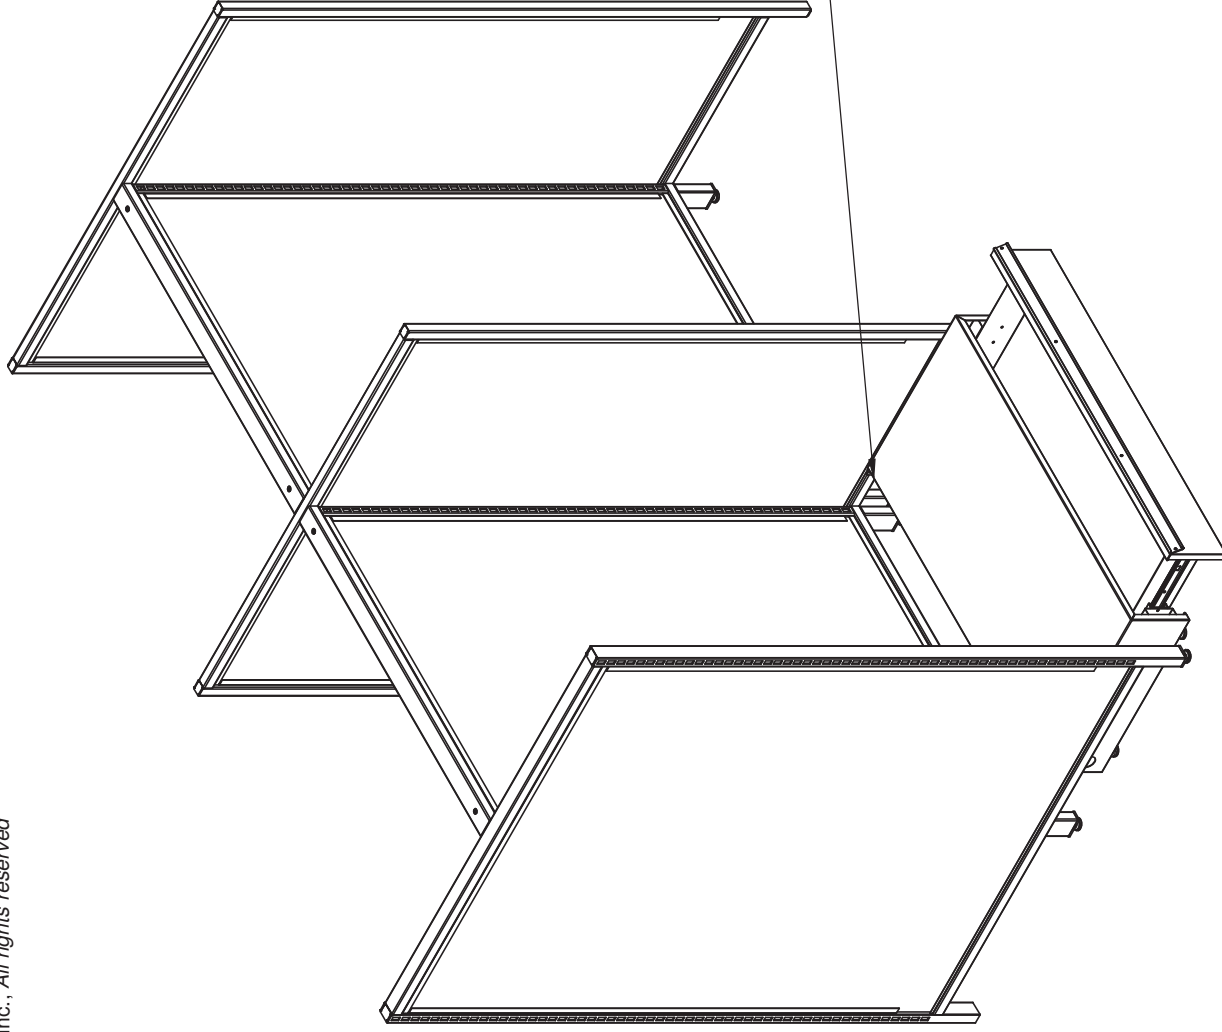

PUSH DRAWER UP TO CORE,
AND HOOK INTO SLOTING.
YOU CAN REMOVE THE DRAWER
OUT OF THE DRAWER BODY TO
MAKE THIS EASIER BY PULLING
DRAWER ALL THE WAY OUT, AND
PUSHING LEVERS ON THE DRAWER
SLIDES TO RELEASE.

IF DESIRED, YOU MAY ALSO REMOVE
THE LEVELING LEGS TO ALLOW THE DRAWER
TO BE ALL THE WAY ON THE GROUND.



madix
ASY-80034772


P.O. BOX 729 TERRELL, TEXAS 75160
214-515-5400 / 800-776-2349

PAGE 6 OF 8 REV. 01
2/21/14 ARB ECM # 500000014190

20140221

VESTA FIXTURE

© 2013 Madix Inc., All rights reserved

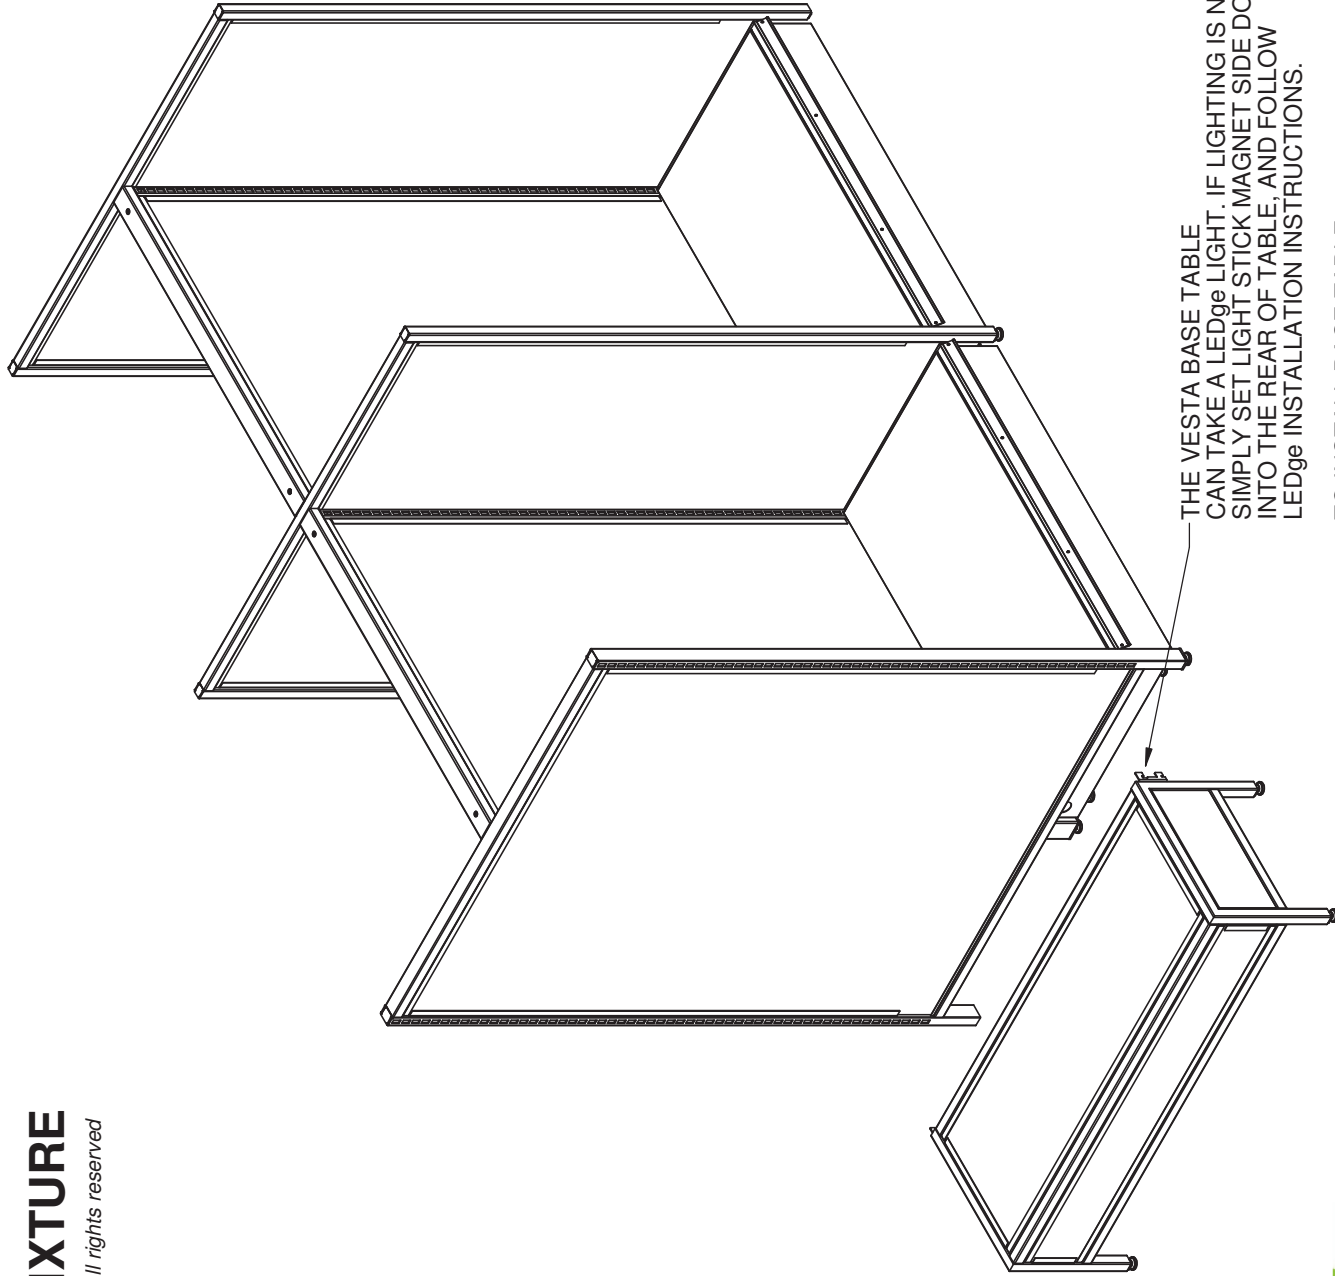

THE VESTA BASE TABLE
CAN TAKE A LEDge LIGHT. IF LIGHTING IS NEEDED,
SIMPLY SET LIGHT STICK MAGNET SIDE DOWN
INTO THE REAR OF TABLE, AND FOLLOW
LEDge INSTALLATION INSTRUCTIONS.

TO INSTALL BASE TABLE
SLIDE IT UP TO THE CORE, AND
HOOK IT INTO THE SLOTTING.



madix
ASY-80034772
P.O. BOX 729 TERRELL, TEXAS 75160
214-515-5400 / 800-776-2349

PAGE 7 OF 8
2/21/14


REV. 01
ARB

ECM # 500000014190

20140221

VESTA FIXTURE

© 2013 Madix Inc., All rights reserved

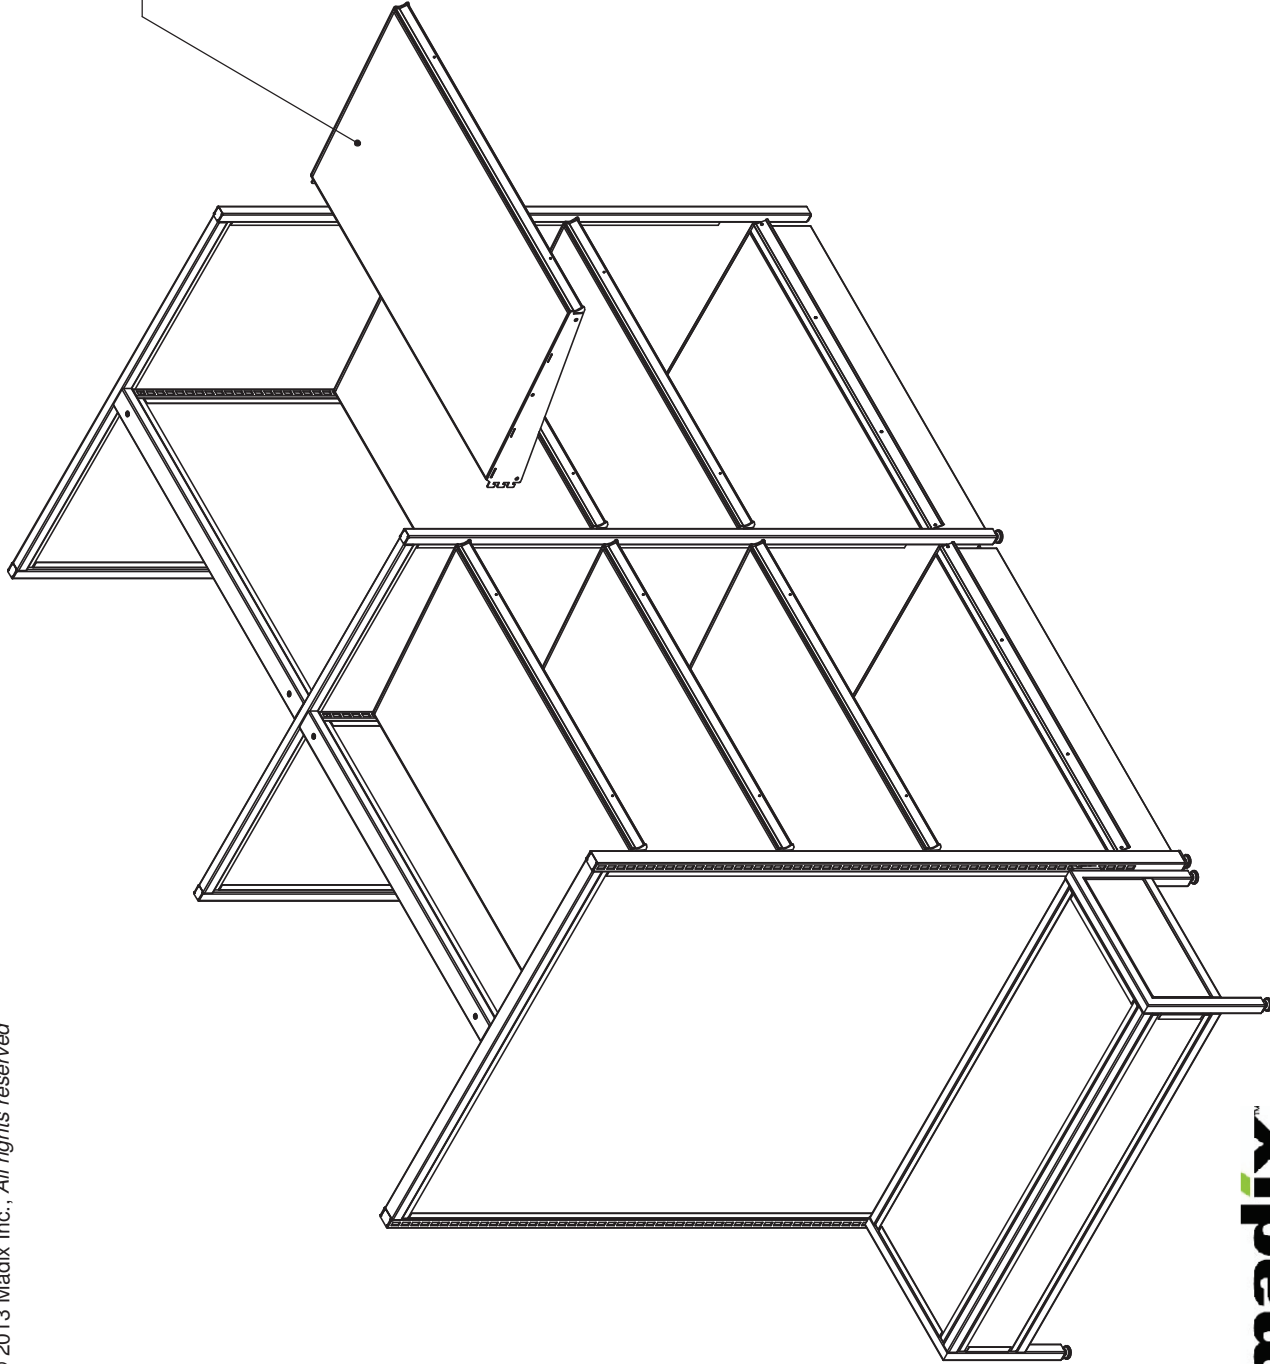

ANY 2 TAB MADIX SHELVING MAY BE USED WITH THE ULTRA FIXTURE PICTURED ARE OUR STRAIGHT IN UFUSA SHELVES WHICH HOOK STRAIGHT INTO THE CORE, OR END FRAME.

DETERMINE IF VERSA BUS BAR STRIP AND LEDGE LIGHTS ARE TO BE USED BEFORE INSTALLING SHELVING! IF SO, INSTALL VERSA STRIPS USING THE SUPPLIED INSTALLATION INSTRUCTIONS (VERSA MADIX DOCUMENT ASY-80034765 OR LEDGE MADIX DOCUMENT ASY-80017242).



madix
ASY-80034772

P.O. BOX 729 TERRELL, TEXAS 75160
214-515-5400 / 800-776-2349

PAGE 8 OF 8

REV. 01

2/21/14

ARB

ECM # 500000014190