


GOLF DAY WALLS

ASY1-302

- 1) INSTALL 144" H. WALL FIXTURE ACCORDING TO FLOOR PLAN.
- 2) LEVEL SYSTEM (SEE ASY-046)
- 3) ANCHOR SYSTEM (SEE ASY-046 & ASY-357)

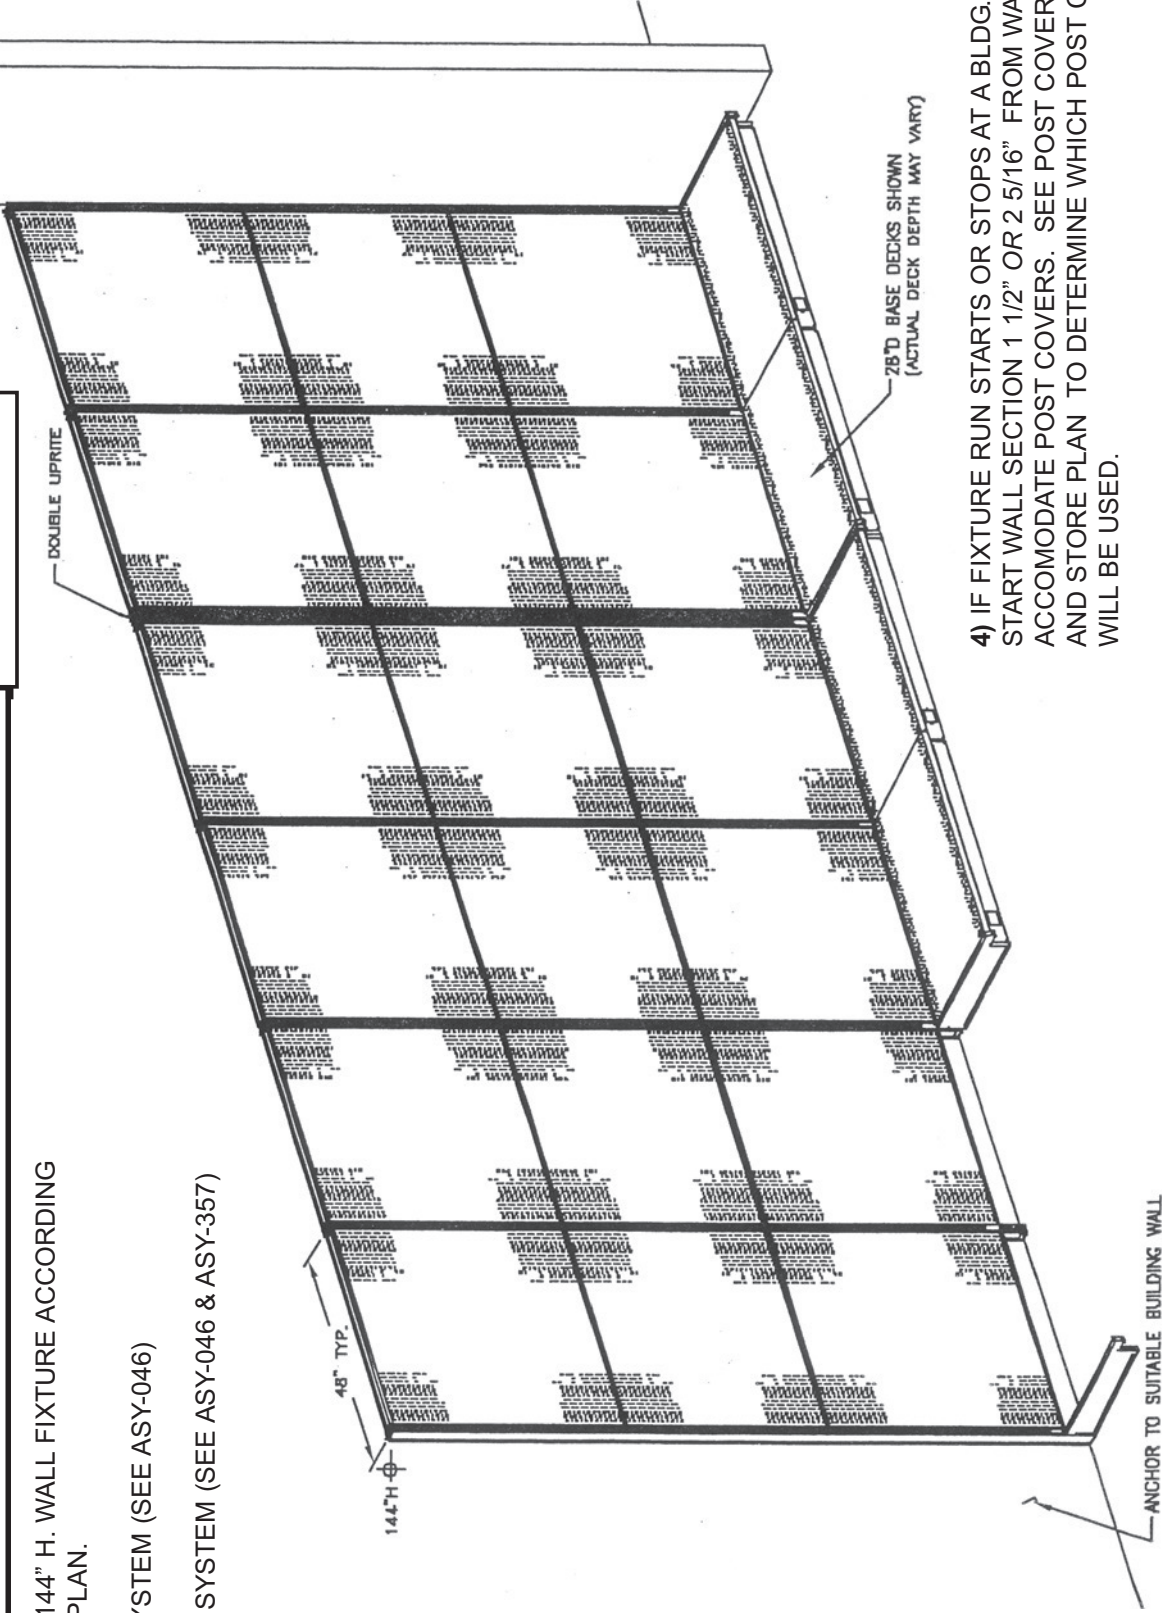

4) IF FIXTURE RUN STARTS OR STOPS AT A BLDG. WALL, START WALL SECTION 1 1/2" OR 2 5/16" FROM WALL TO ACCOMMODATE POST COVERS. SEE POST COVERS (P.6) AND STORE PLAN TO DETERMINE WHICH POST COVER WILL BE USED.



P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349
 P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 205.839.6354 / 800.633.6282

REV

REV#	ECN#	REVISION	BY	DATE
AL4003			AJB	8/19/05


GOLF DAY WALLS

PAGE 2 OF 8

ASY1-302

5) INSTALL HYPERMAXI (HM) AS SHOWN
(SEE ASY-083)

6) LEVEL HYPERMAXI

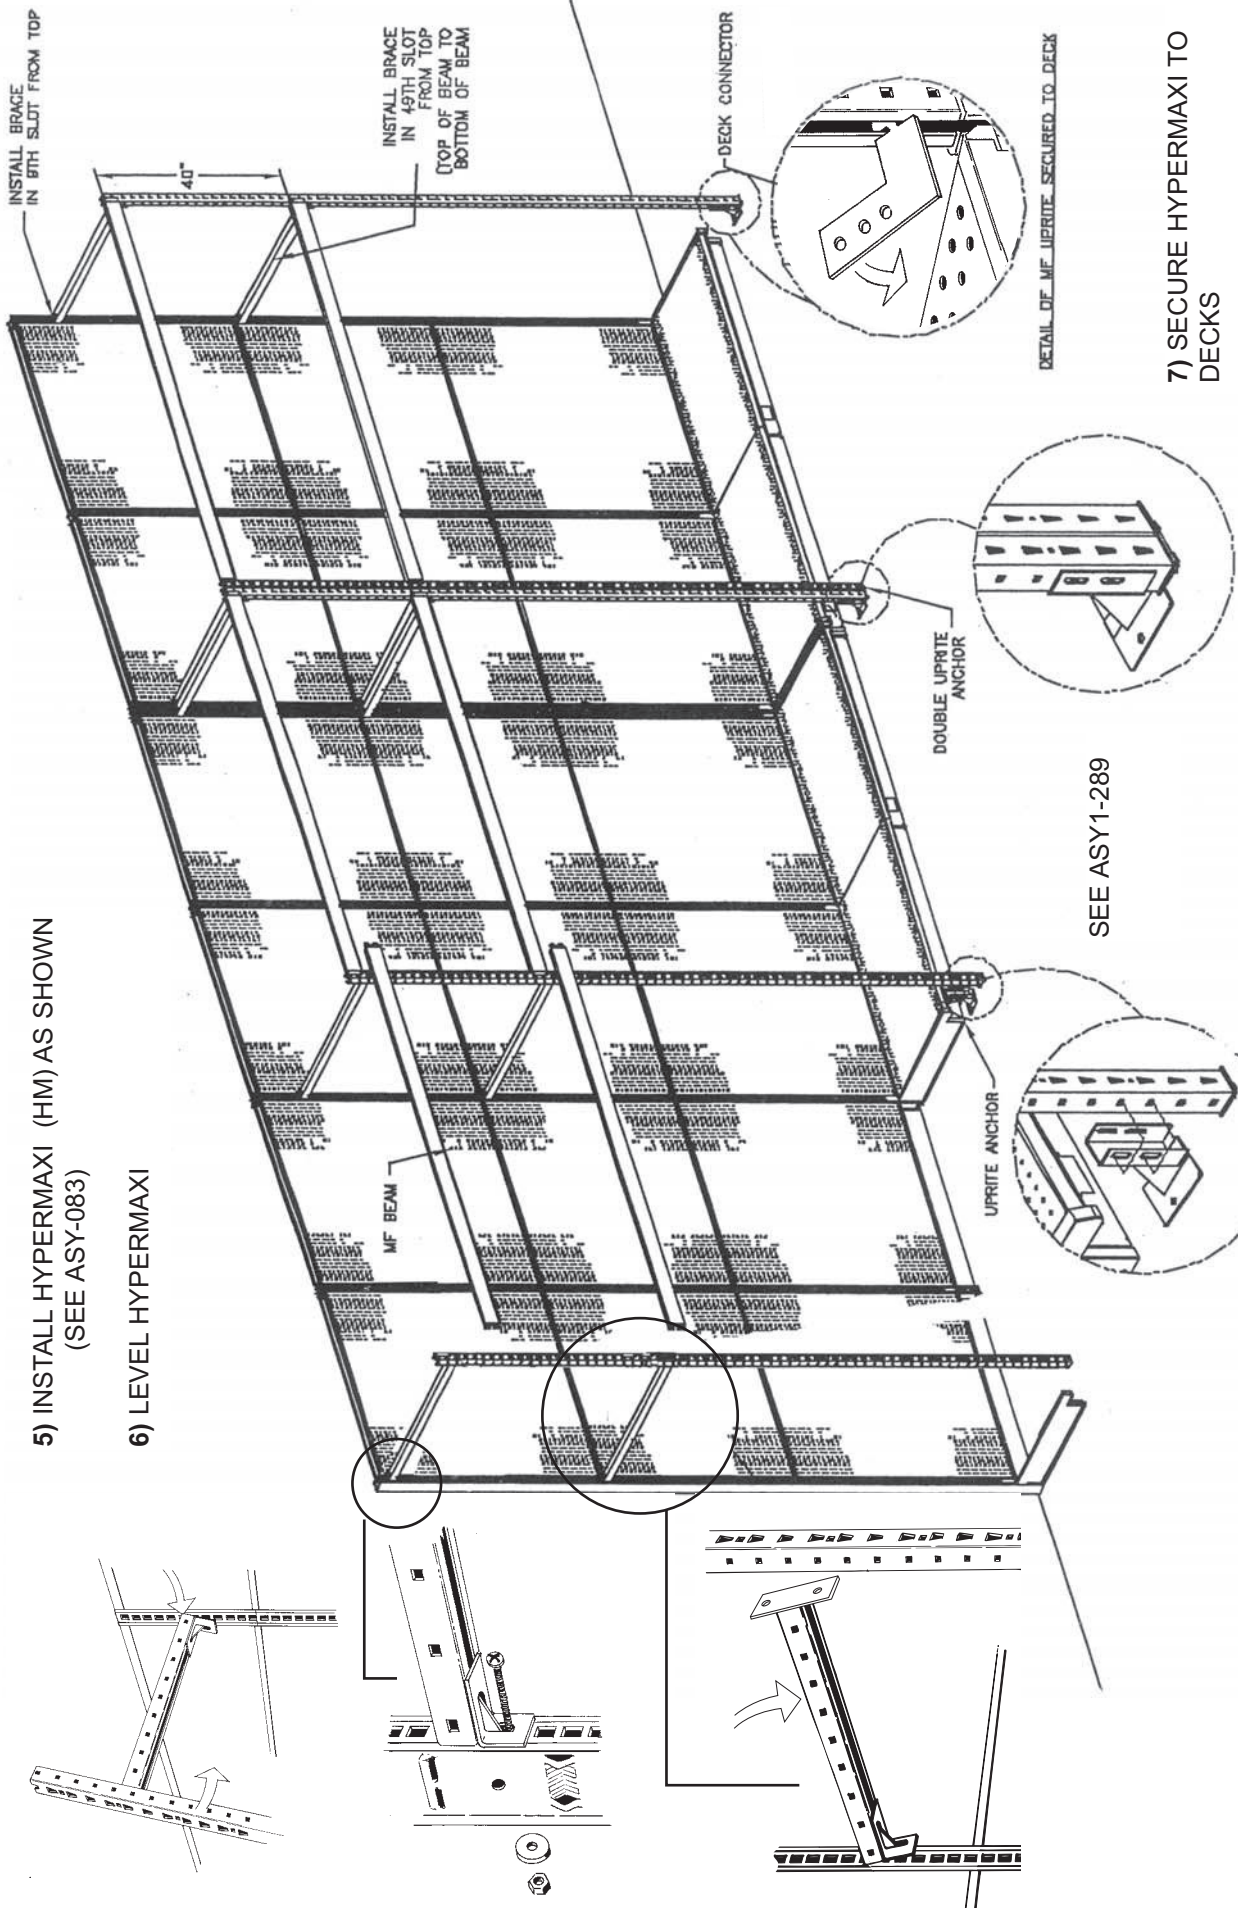


7) SECURE HYPERMAXI TO DECKS

ASY1-302

GOLF DAY WALLS

8) INSTALL END PANELS. LOCATE AND PANELS IN PLACE AND TUCK TOP AND FRONT EDGES INTO HYPERMAXI. SECURE TO UPRIGHTS WITH END PANEL HOOKS. (4) PER PANEL SPACED EVENLY.

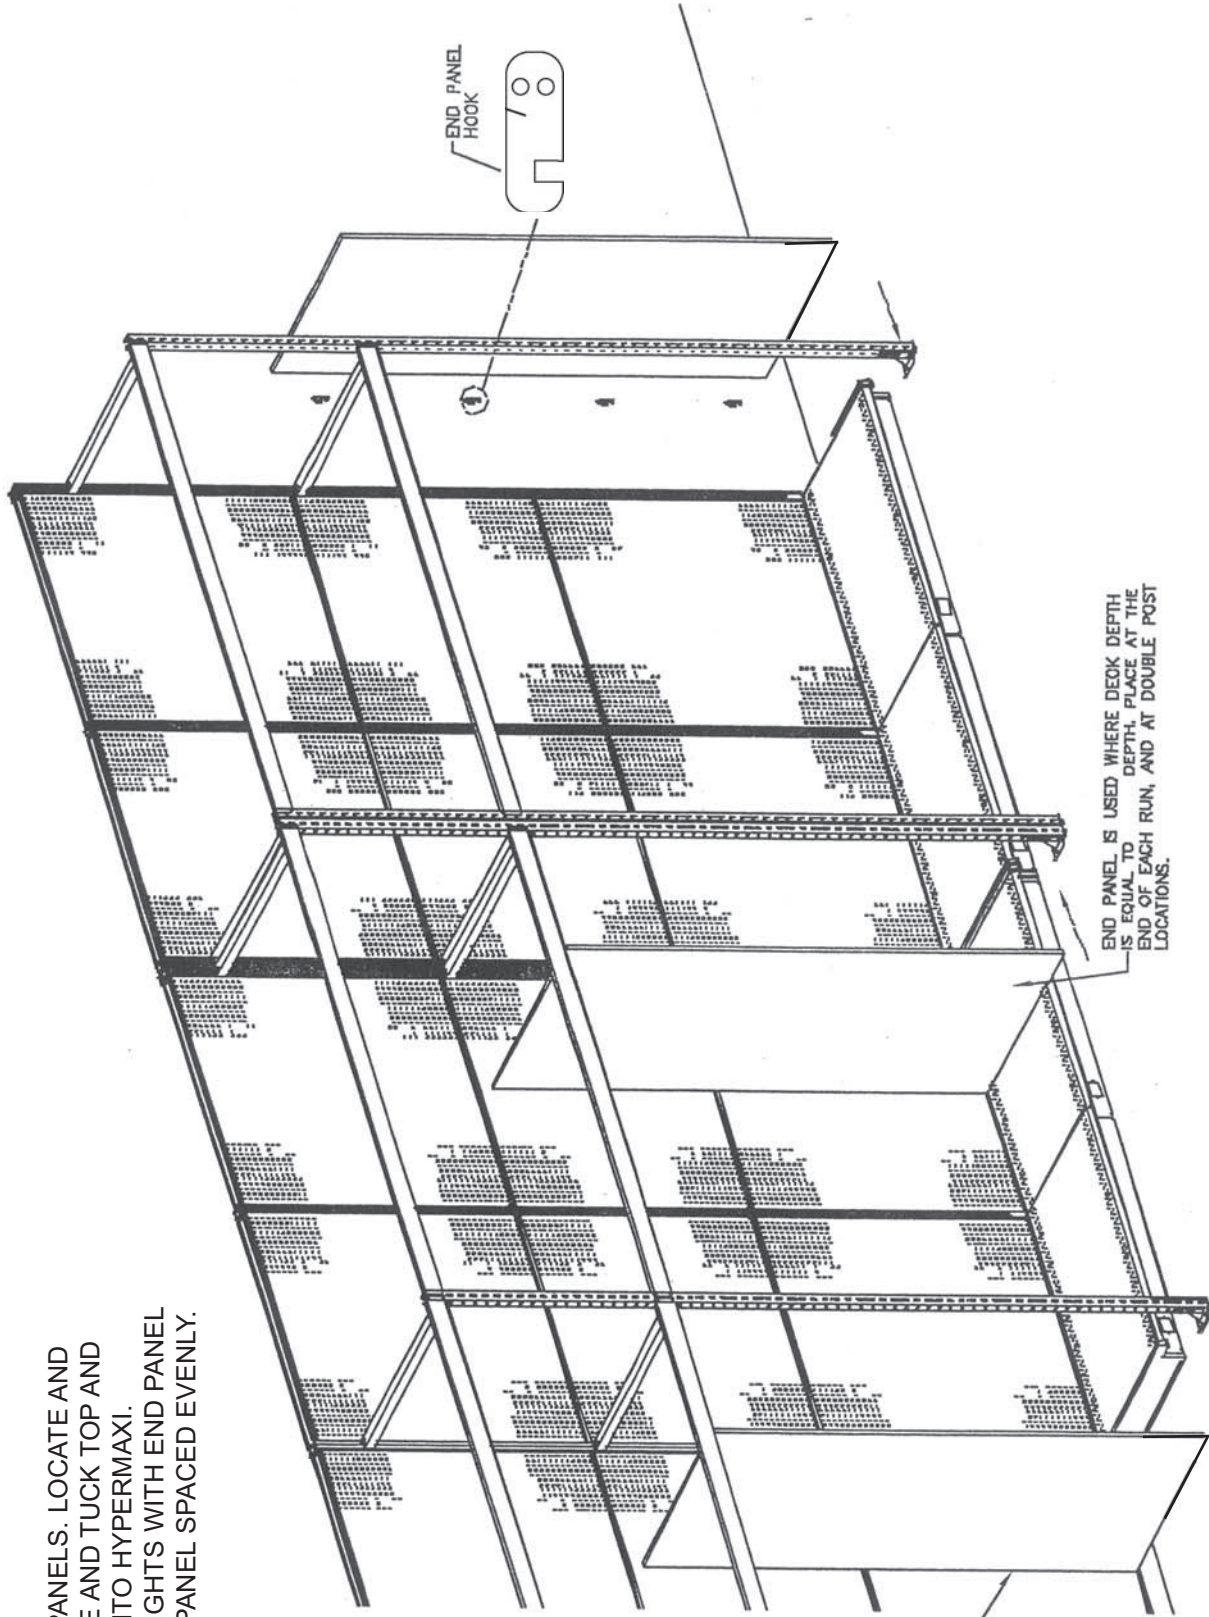

END PANEL ADJACENT TO SLOTBALL GOLF CLUB DISPLAY

END PANEL IS USED WHERE DECK DEPTH IS EQUAL TO DEPTH, PLACE AT THE END OF EACH RUN, AND AT DOUBLE POST LOCATIONS.




REV

P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349
P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 205.839.6354 / 800.633.6282

ASY1-302

GOLF DAY WALLS

- 9) INSTALL MULTI PURPOSE WOOD SHELF BRACKETS INTO UPRIGHTS 38TH SLOT FROM BASE. SCREW SHELVES TO BRACKETS WITH 5/8" SCREWS PROVIDED.
- 10) UPPER CROSSTUBE FOR SLATWALL PANEL MOUNTS IN 81ST SLOT FROM BASE. LOWER CROSSBAR MOUNTS IN 51ST SLOT. SEE ASY1-296.
- 11) HOOK SLATWALL PANEL ON CROSSTUBES. SEE ASY1-296.

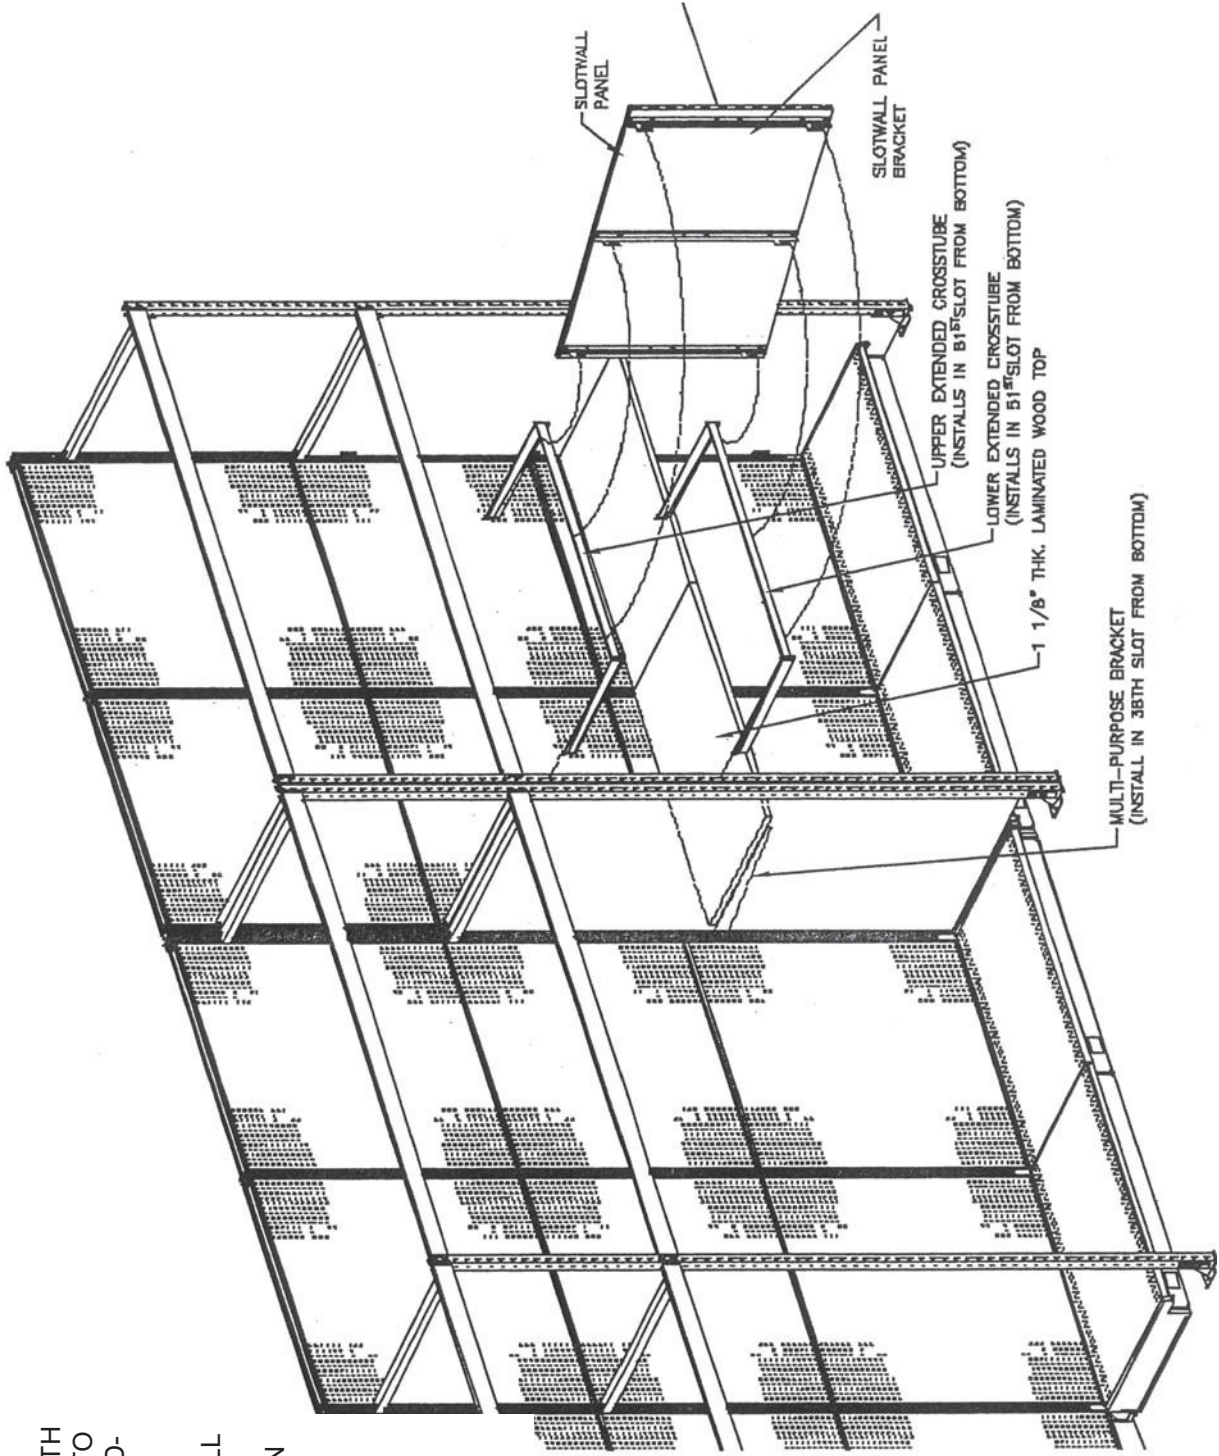

P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349
 P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 205.839.6354 / 800.633.6282

REV


STORE FIXTURES

GOLF DAY WALLS

12) ASSEMBLE SLATWALL PANEL SET OUTSIDE OF DISPLAY AS SHOWN.

13) LIFT LOWER HYPERMAXI BEAM OUT AND SLIDE SLATWALL ASSEMBLY BACK INTO DISPLAY IN POSITION.

14) FASTEN SLATWALL ASSEMBLY TO HYPERMAXI UPRIGHT WITH PROVIDED ANGLES. SEE DETAIL BELOW

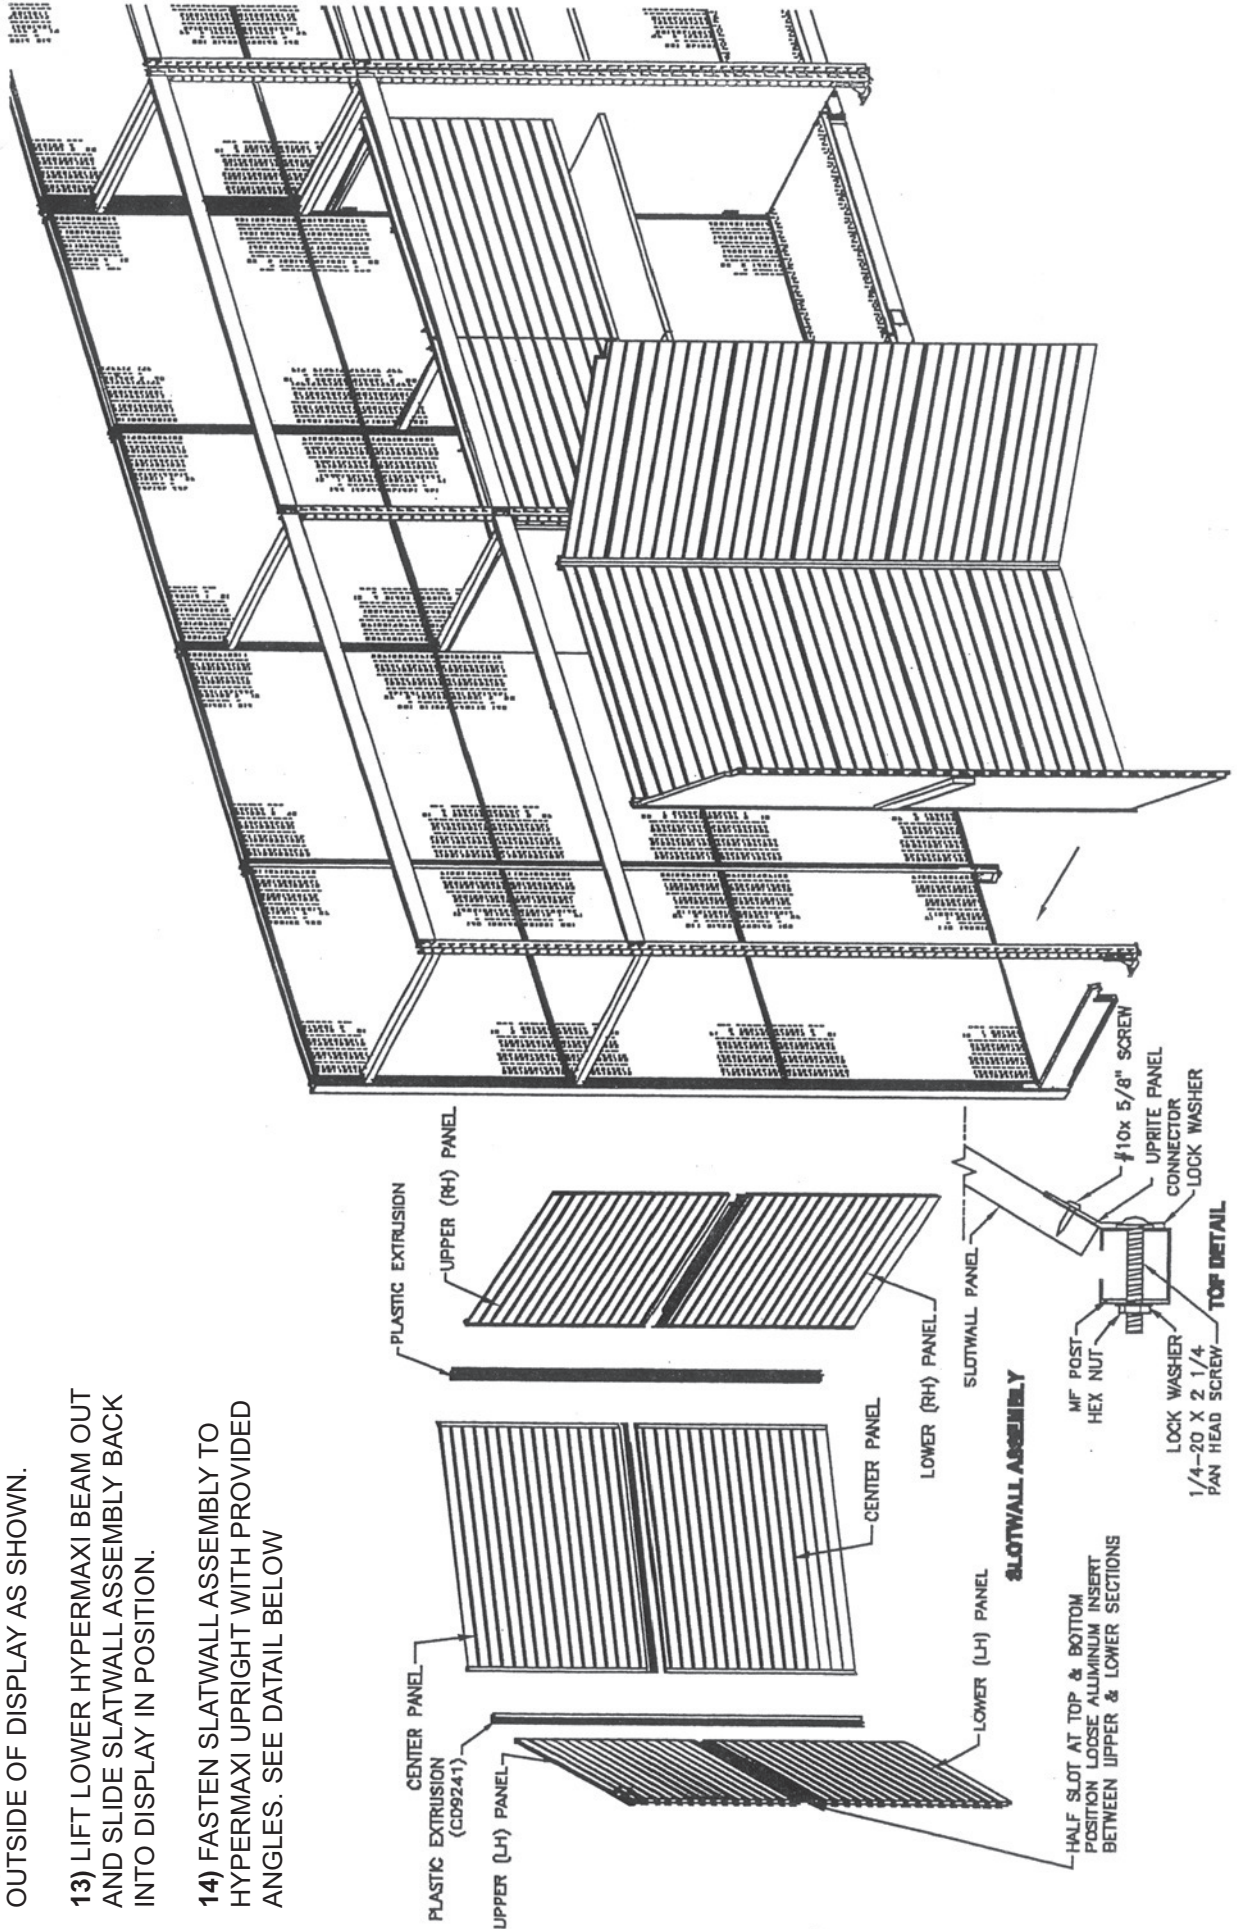

REV

P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349

P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 205.839.6354 / 800.633.6282




STORE FIXTURES

GOLF DAY WALLS


ASY1-302

15) HOOK POST COVERS ON HYPERMAXI UPRIGHTS


TOP DETAILS

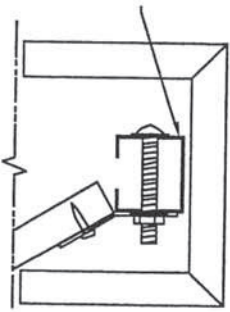


DEEP POST COVER
HOOKS ON VIA INTERNAL
BRACKETS - STRAIGHT IN
AND DOWN.

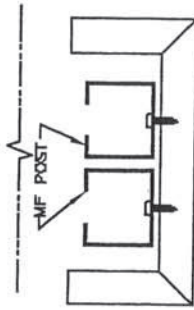

DOUBLE POST COVER
HOLD TO UPRIGHTS AND
SCREW THRU BACK OF
HM INTO COVER

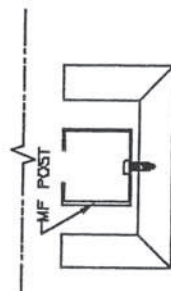

SINGLE POST COVER
HOLD TO UPRIGHTS AND
SCREW THRU BACK OF
HM INTO COVER

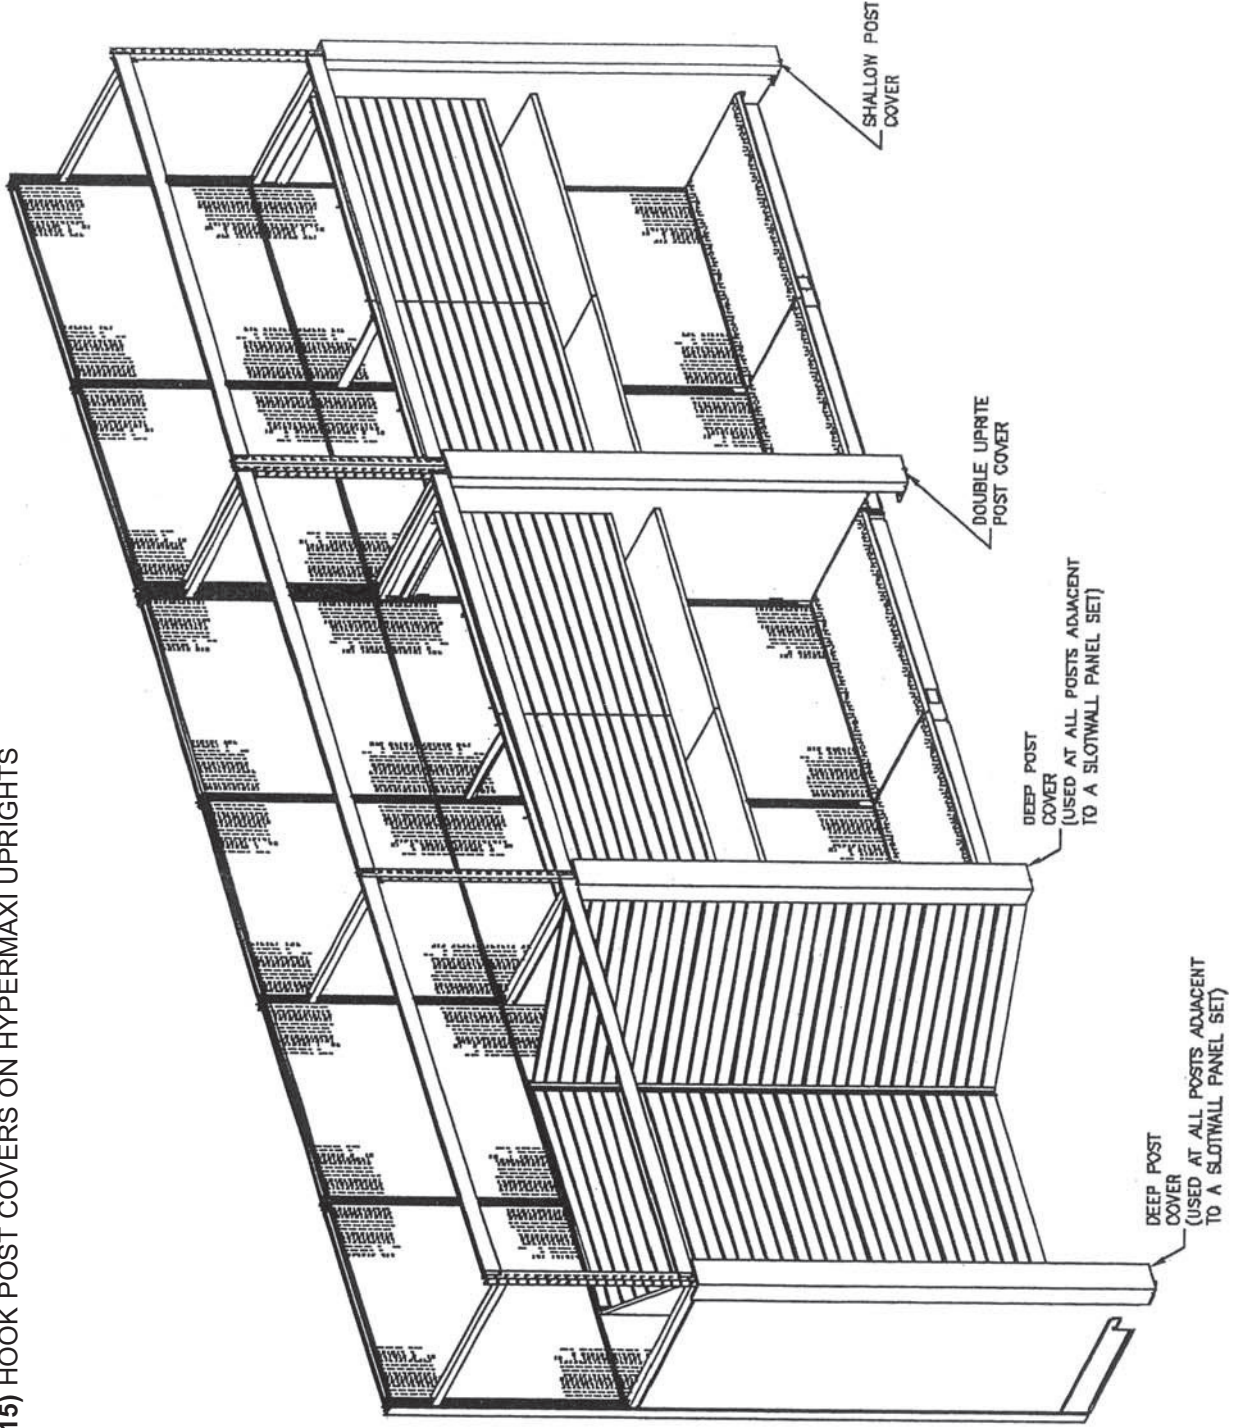

STORE FIXTURES

P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349
P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 205.839.6354 / 800.633.6282

REV


GOLF DAY WALLS

ASY1-302

16) INSTALL "Z" BAR CLIPS ONTO BACK OF CANOPY PANELS AT PRE-DRILLED PILOT HOLES.

17) INSTALL CANOPY PANELS BY HANGING "Z" BAR CLIPS OVER HYPERMAXI BEAMS.

GAP BETWEEN FASCIA OK AT THESE POINTS (KEYSTONES WILL COVER AREA)

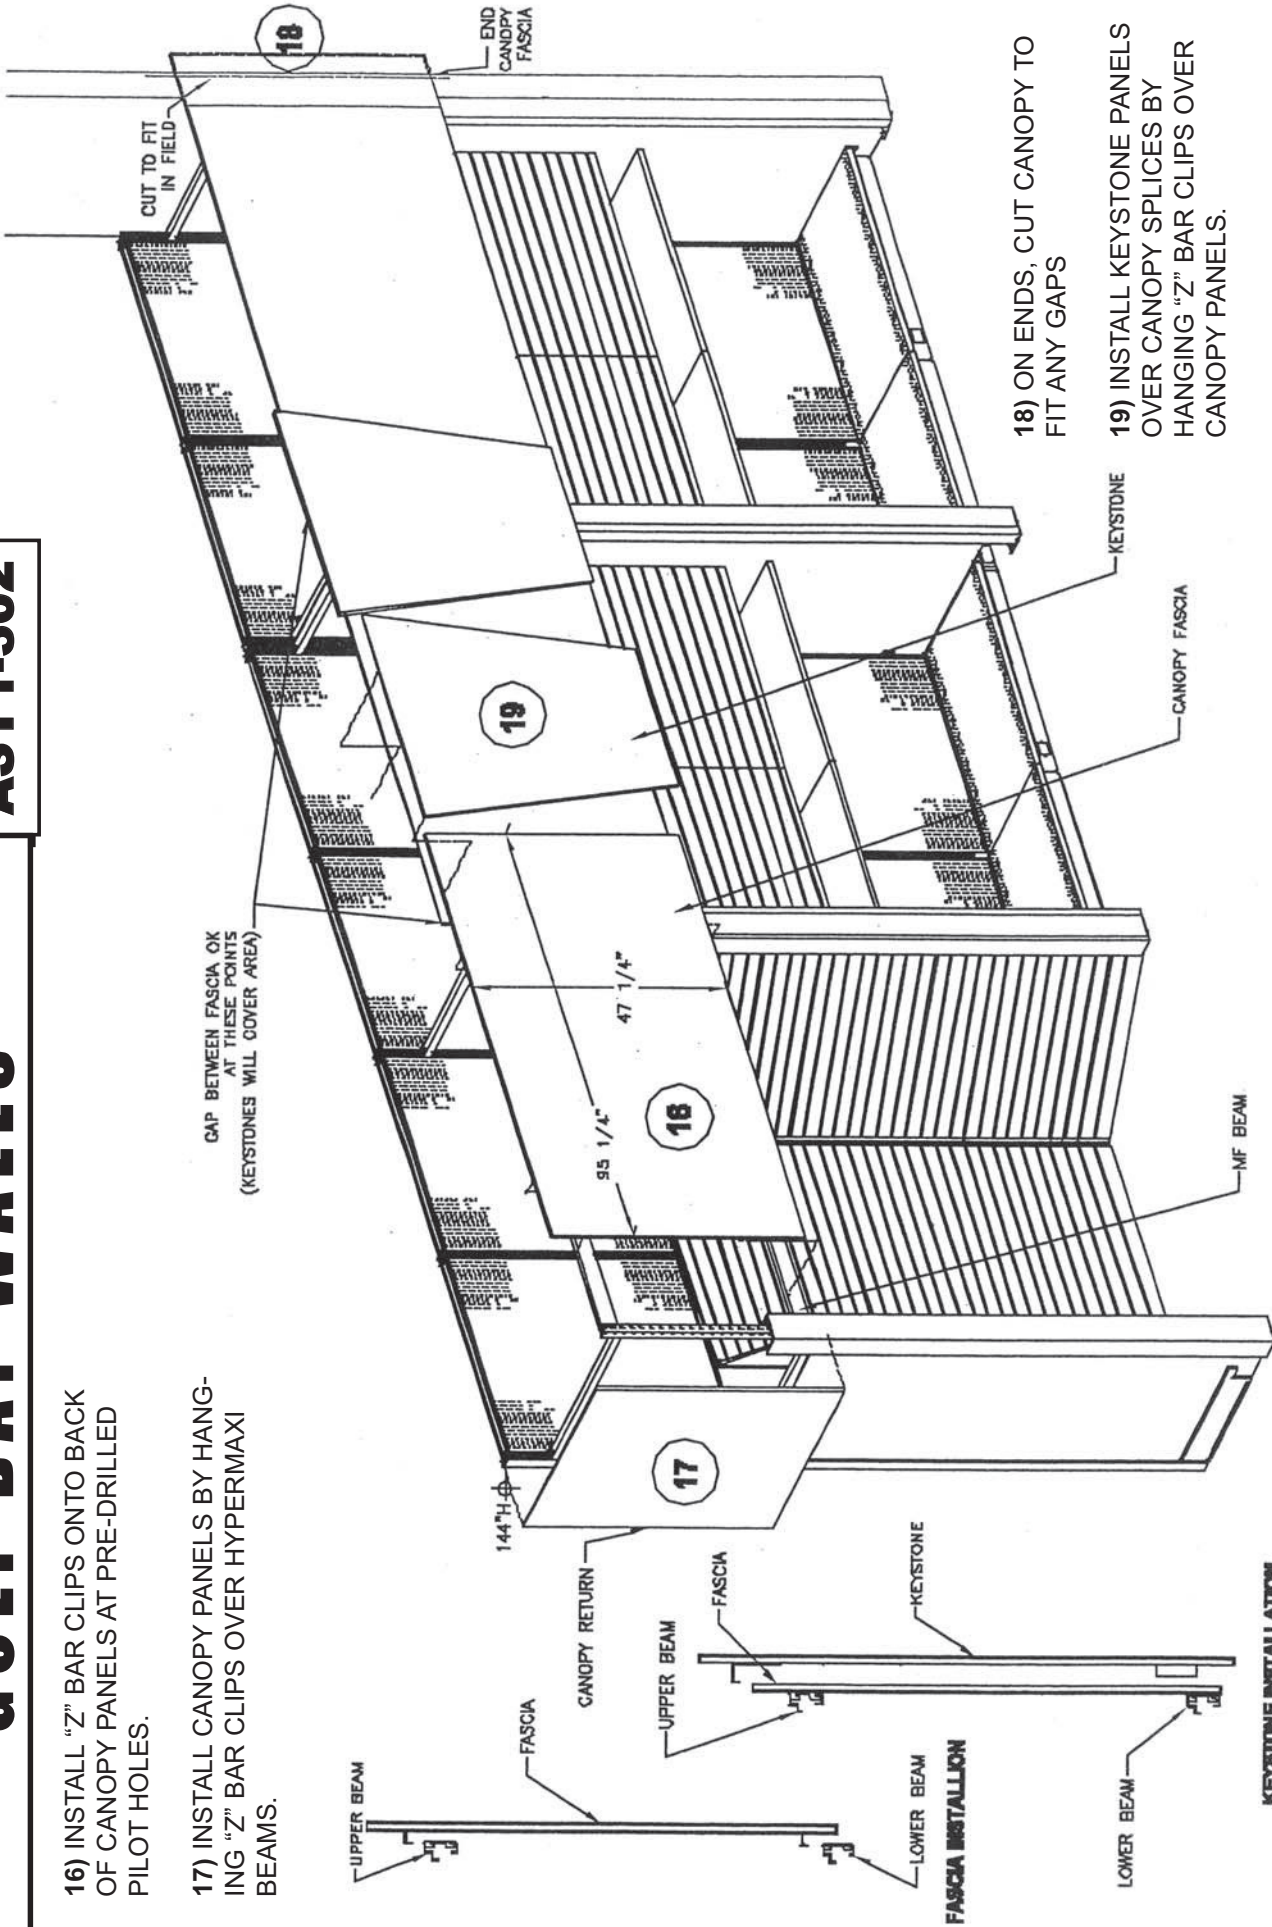

18) ON ENDS, CUT CANOPY TO FIT ANY GAPS

19) INSTALL KEYSTONE PANELS OVER CANOPY SPLICES BY HANGING "Z" BAR CLIPS OVER CANOPY PANELS.

KEYSTONE INSTALLATION




P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349
 P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 205.839.6354 / 800.633.6282

REV

ASY1-302

GOLF DAY WALLS

- 20) INSTALL LIGHT DIFFUSER SUPPORT ANGLE ON TO PEGBOARD ABOVE SLATWALL.
- 21) INSTALL LIGHT BRACKETS TO UNDERSIDE OF SHELVES AND INSTALL LIGHT FIXTURES TO BRACKETS.
- 22) INSTALL LIGHT DIFFUSER PANELS. PANELS REST ON ANGLES AND HYPERMAXI FRONT BEAMS.

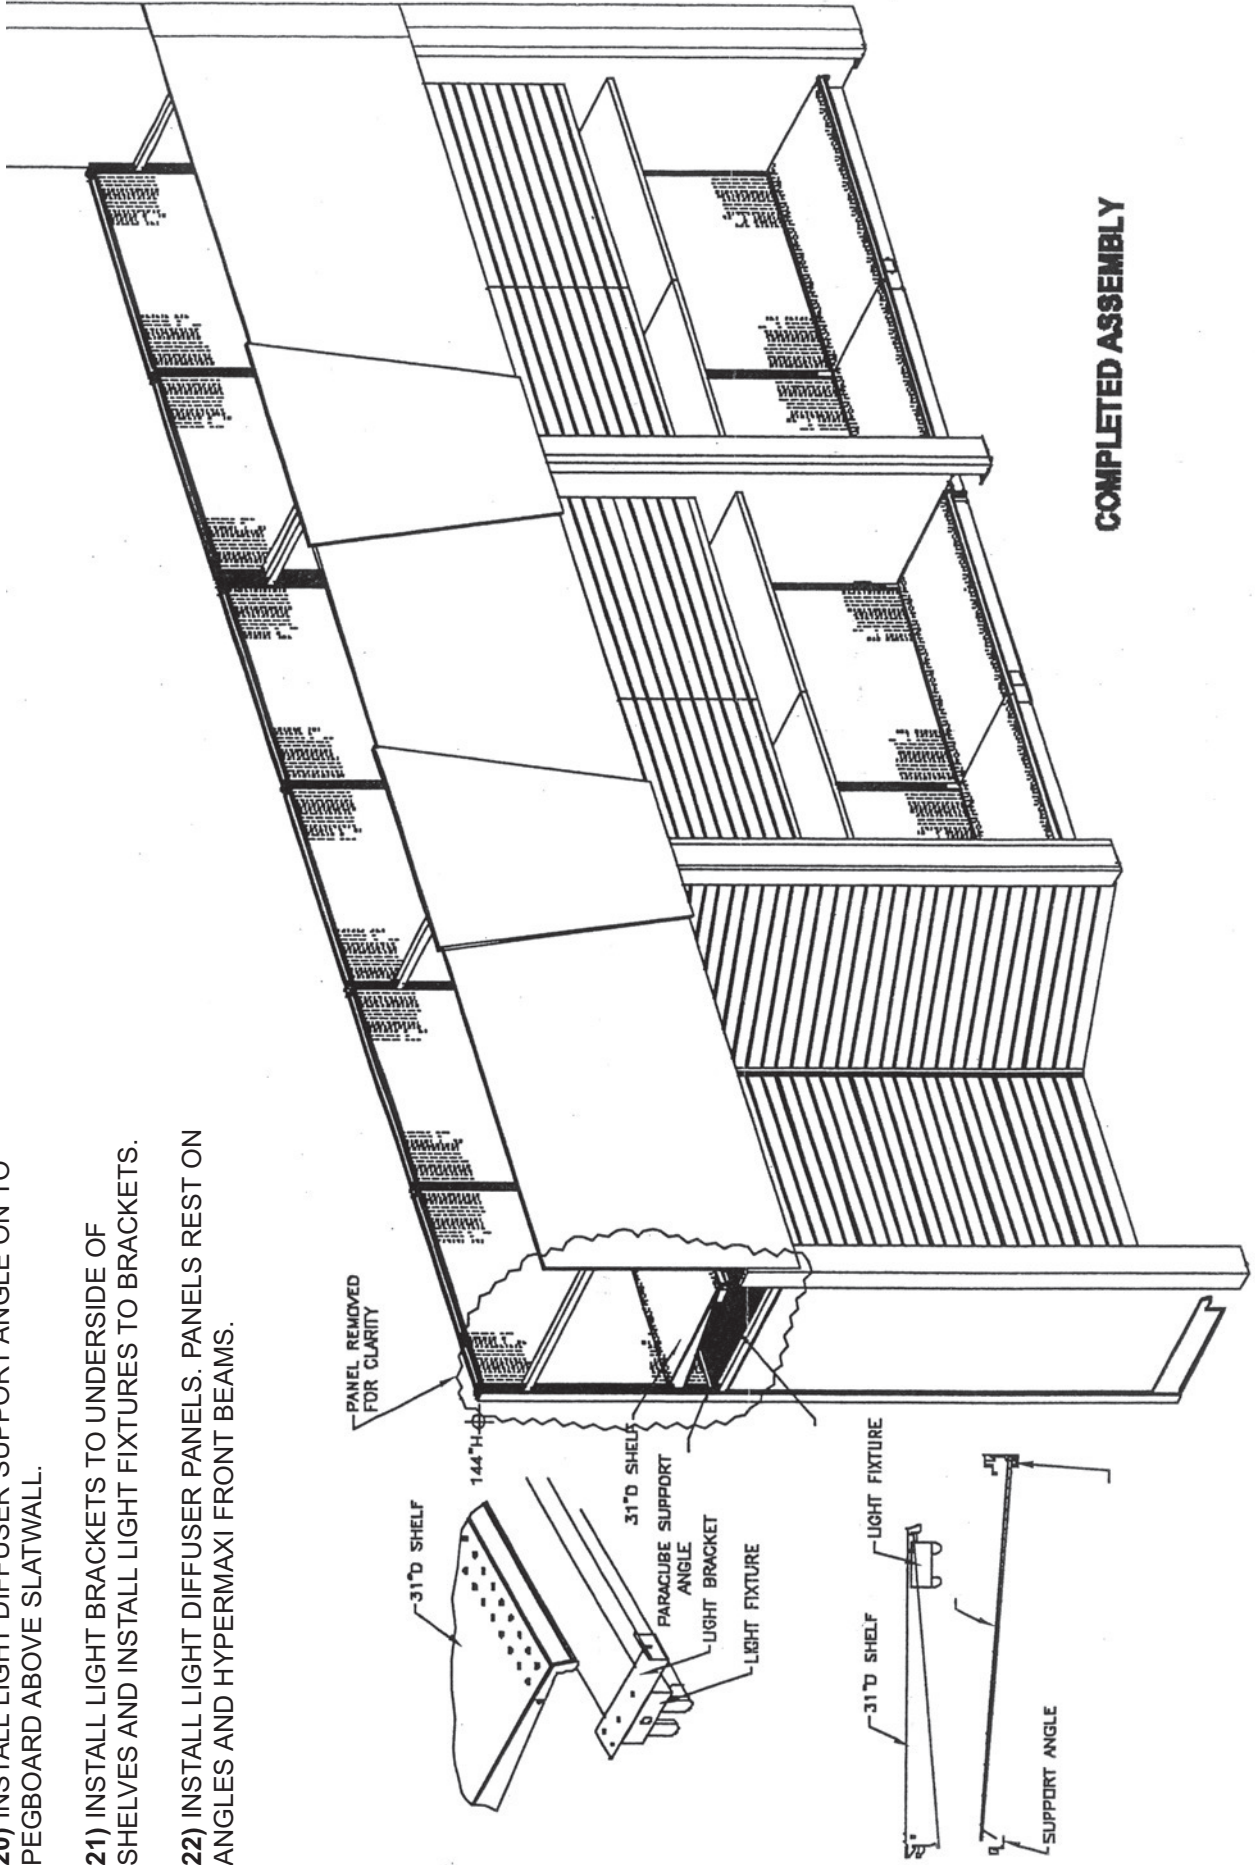

COMPLETED ASSEMBLY



REV

P.O. BOX 729 / TERRELL, TEXAS 75160 / 972.563.5744 / 800.776.2349
 P.O. BOX 177 / GOODWATER, ALABAMA 35072 / 205.839.6354 / 800.633.6282

STORE FIXTURES